

CB2-RK INSTALL

1. TOOLS REQUIRED




2. Verify you received all parts required




3. Remove the yellow line push connect fitting with the 12mm wrench




4. Remove the four mounting screws using the 1/8 hex key

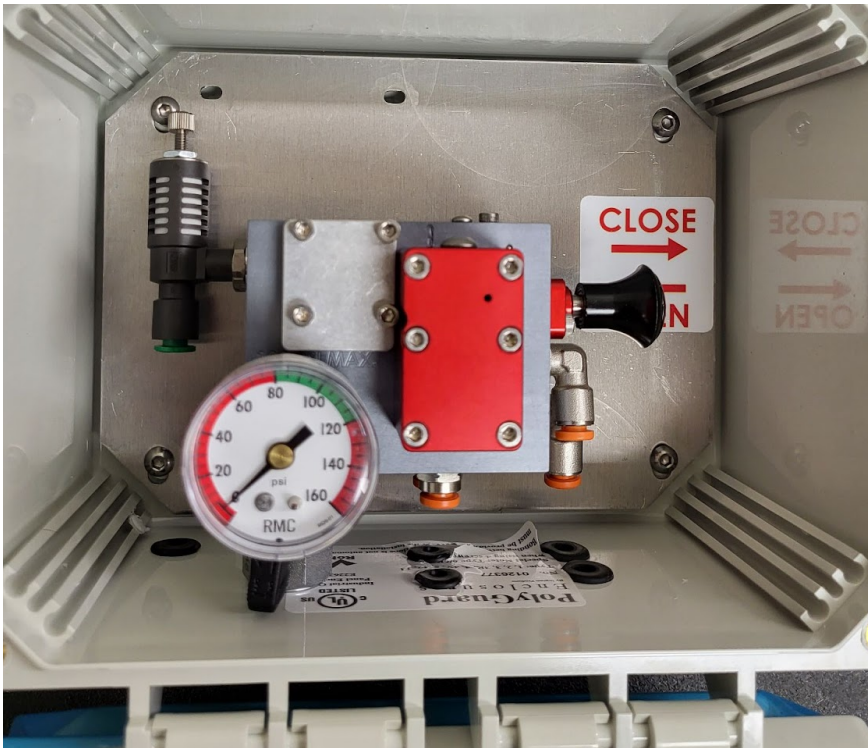


5. Remove the two screws using a 1/8 hex key and a phillips screw driver

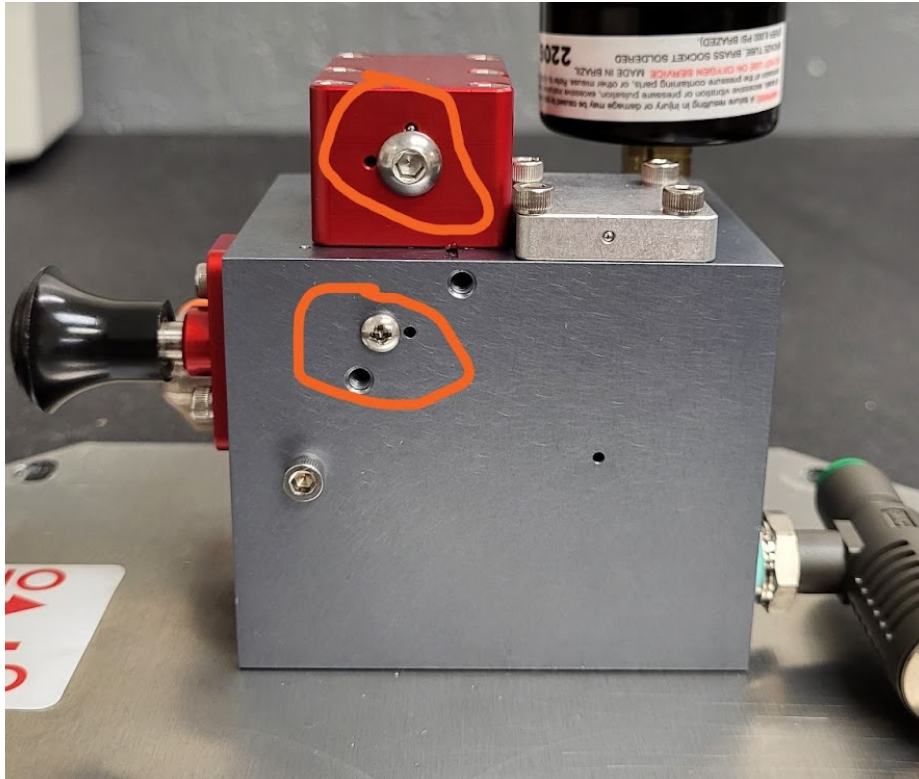


6. Install the silver solenoid into the top hole then use a hex key to tighten

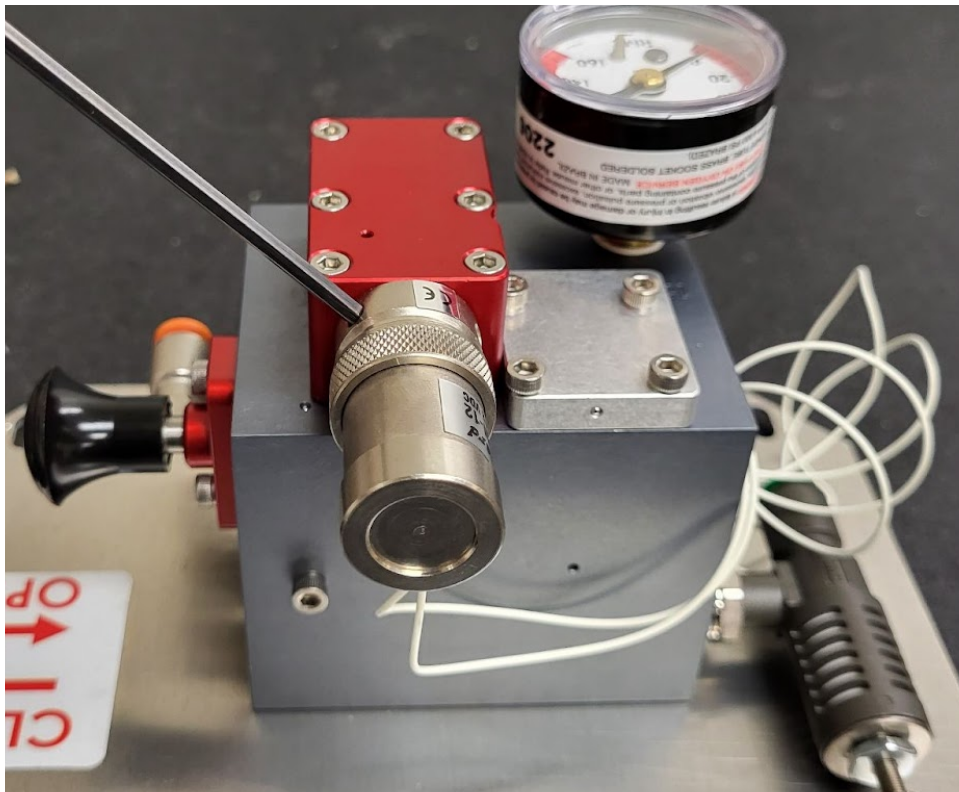


7. Loosen the knurled nut to adjust then retighten

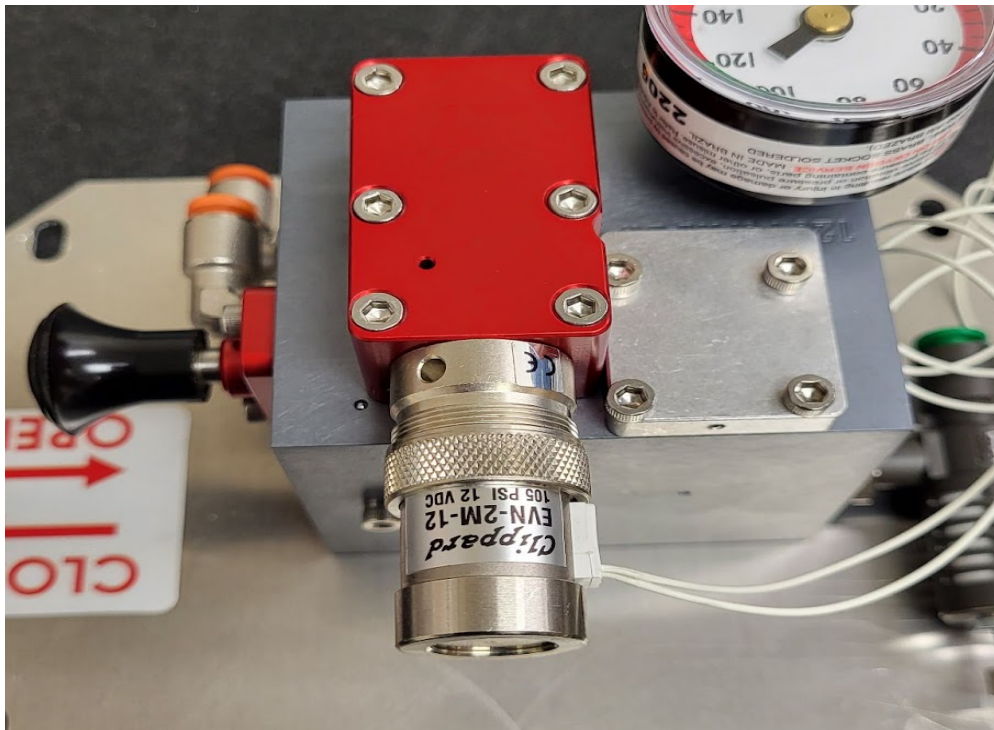

8. Fasten the black solenoid to the control box using the provided screws

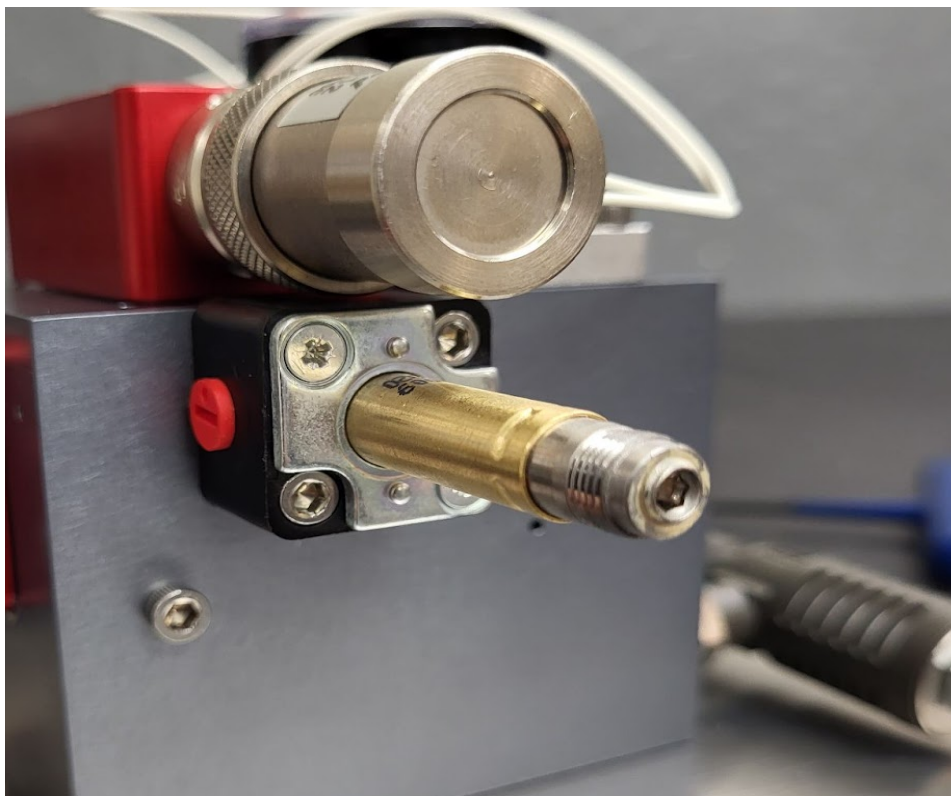


9. Finish installing the black solenoid

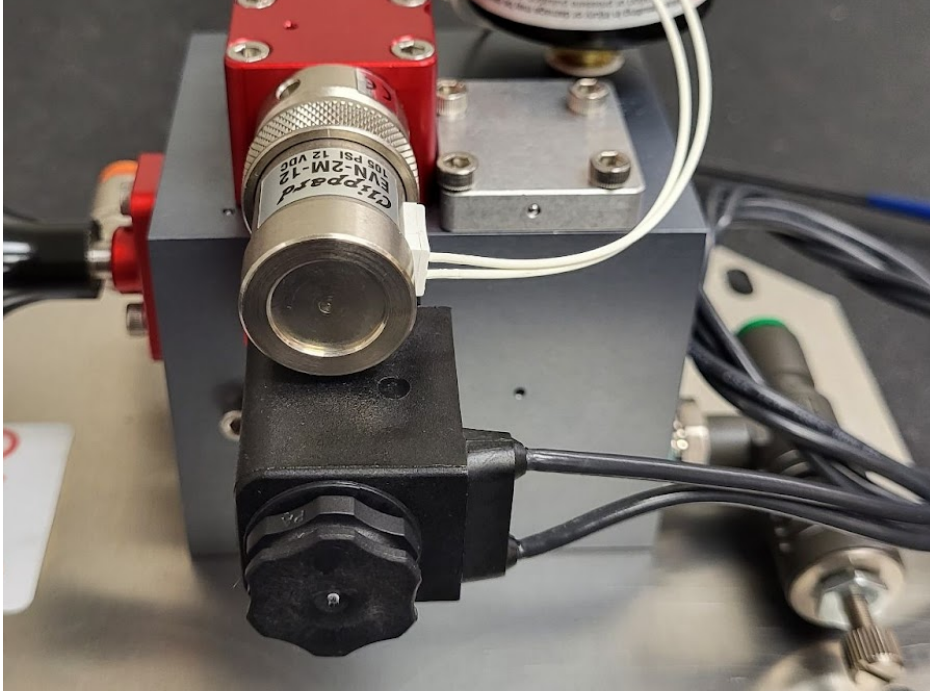

10. Wire the two solenoids together, it does not matter which wires connect



11. Connect the two solenoid wires to the white and brown wire from the receiver, the blue and gray will only be used if you are wiring two boxes together. Red and black are your power and ground wires.

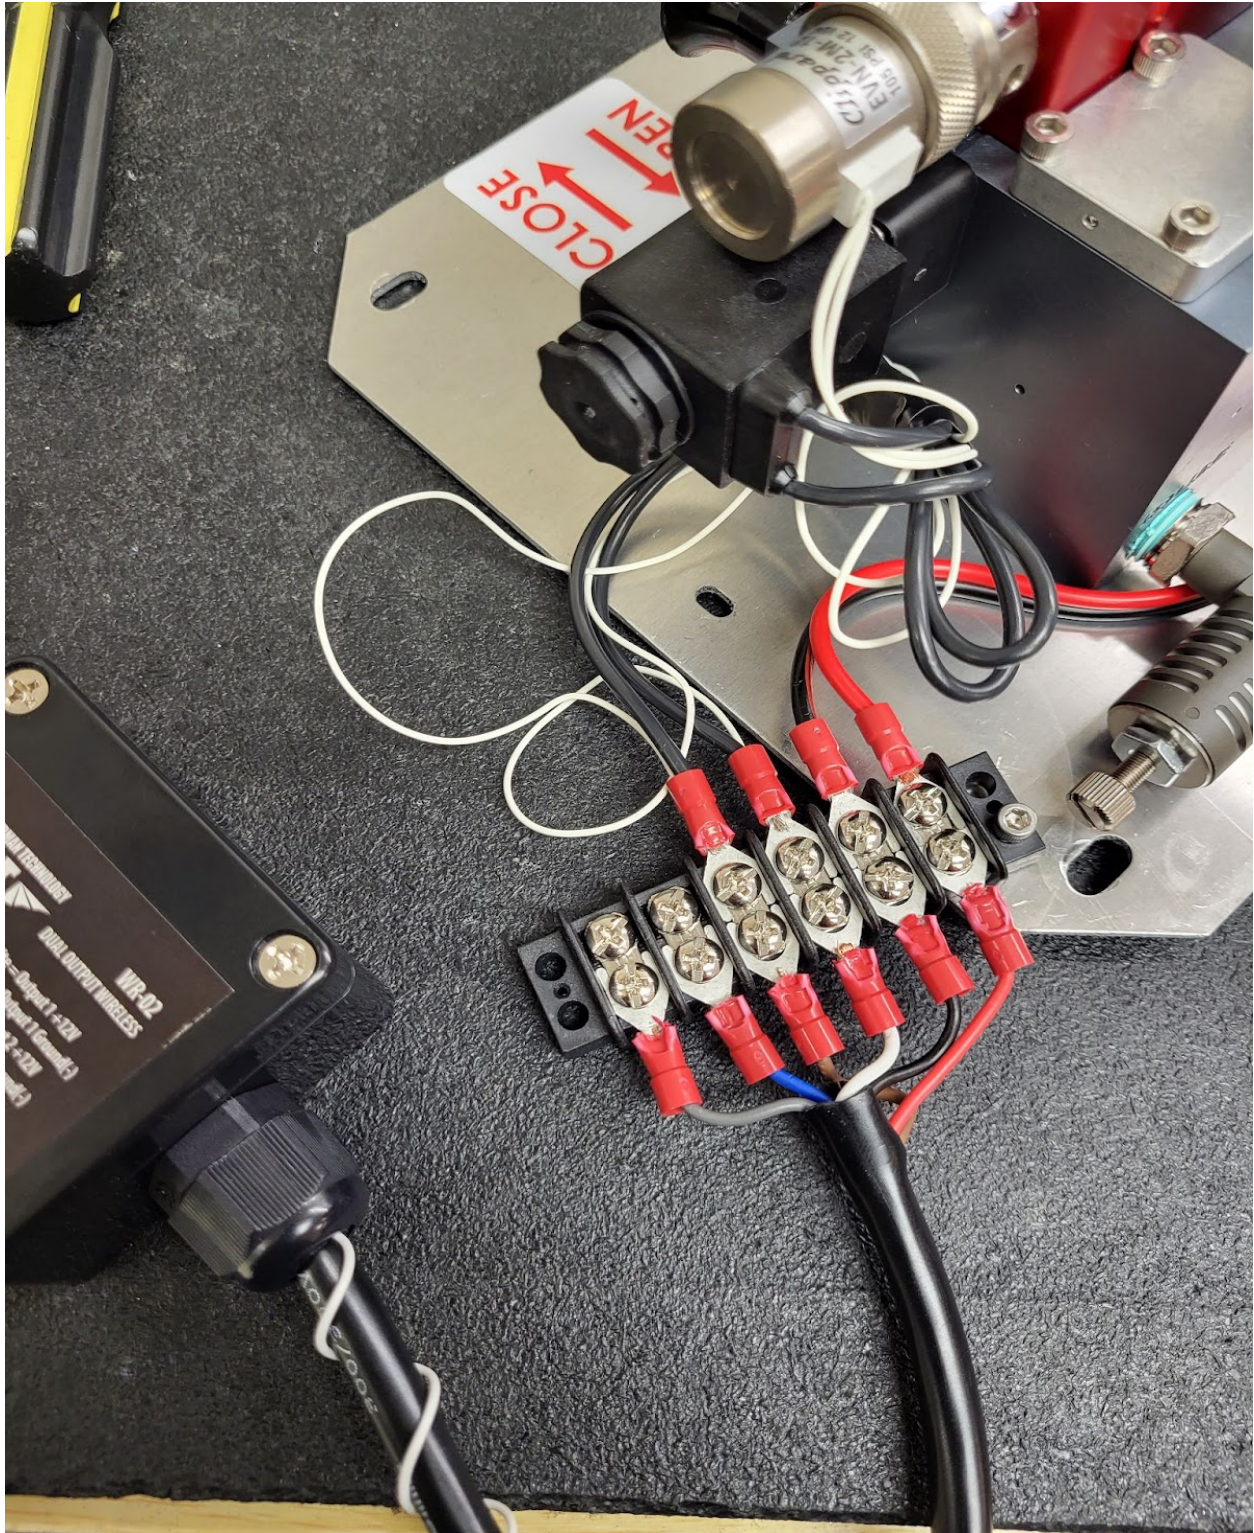

12. Remove the white plastic cover and install a grommet to run your power and ground through then reinstall the control box back into the enclosure.

